


INSTRUCTION MANUAL

**UNIVERSAL REMOTE CONTROL
To suit Ventair New Generation Ceiling Fan range**

Model: UCFR

Wiring Diagram / Configuration

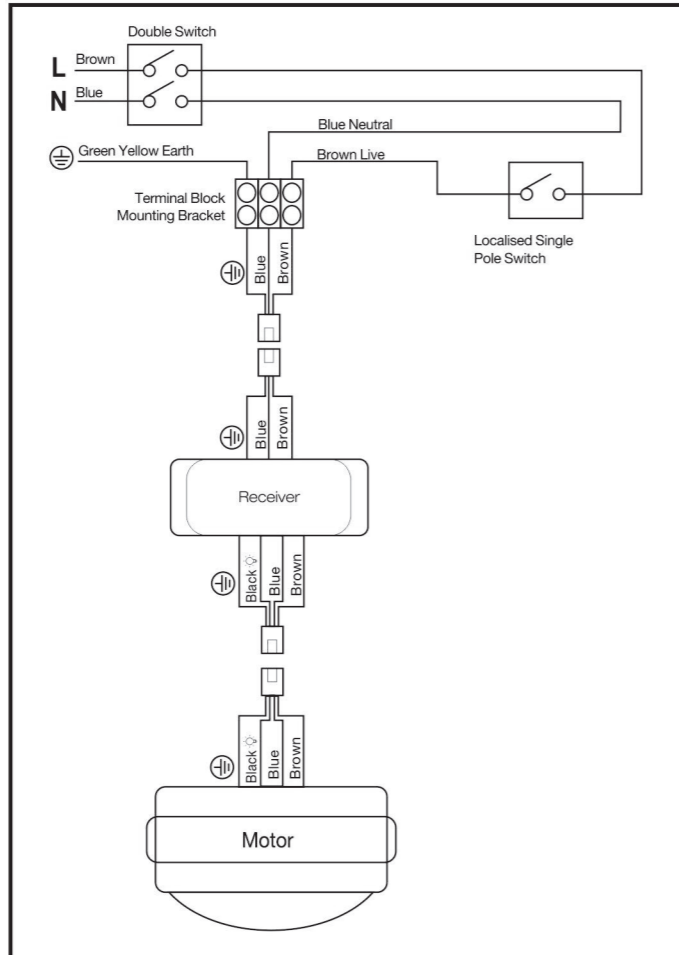

The handpiece + receiver come factory paired.
Should you wish to pair a handpiece to multiple fans, see steps below.
Step 1. Turn "OFF" isolation switch.
Step 2. Turn "ON" isolation switch and within 10 seconds, press Fan OFF button for 3 seconds.

INSTRUCTIONS

Technical specifications

Operating voltage frequency:	240V~ 50Hz
Maximum operating wattage for ceiling fan:	100W
Maximum operating wattage for light:	300W
Battery:	AA 1.5V x 2

A localised single pole switch (isolation switch) and an all pole disconnection switch should be included in the fixed wiring. (A safety switch in the switchboard can be considered as a double pole disconnection point.)

Operation

Turn Wall Switch to "ON"

NOTE: For fan models "with light", light will default to "ON".

Speed Buttons: 3 SPEED - HIGH / MED / LOW.

Off Button: Ceases fan operation.

Light Buttons: ON / OFF - Only applicable to fan models "with light".

Warranty

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major fault and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major fault.

This product comes with a 12 month replacement warranty valid from the date of purchase. If you consider there is a manufacturer defect to the remote control, contact the warranty line on 1300 665 926 or log a claim at www.ventair.com.au/warranty



4 Capital Place, Carrum Downs VIC 3201 ventair.com.au

Ph: +61 3 9775 0556 Fax: +61 3 9775 0775

CAUTION

Read Instructions Carefully
Before Proceeding

- WIRING INSTALLATION
- TECHNICAL SPECIFICATIONS
- OPERATION
- WARRANTY INFORMATION



**MUST BE
INSTALLED
BY A LICENSED
ELECTRICIAN**