

29-31 Richland St. Kingsgrove. Sydney NSW 2208 Australia

Phone: 02 9554 9600 | Fax: 02 9554 9433

enquiries@domuslighting.com | www.domuslighting.com

Installation Manual

ZEKE-9-12V-RND

Date: 02/2020

Order Code	Product Code	Description
19870	ZEKE-9-12V-RND-BLK-WW	Black, Round Exterior Wall Light, 3000K Warm White
19871	ZEKE-9-12V-RND-BLK-W	Black, Round Exterior Wall Light, 5000K White
19864	ZEKE-9-12V-RND-SLR-WW	Silver, Round Exterior Wall Light, 3000K Warm White
19865	ZEKE-9-12V-RND-SLR-W	Silver, Round Exterior Wall Light, 5000K White
19866	ZEKE-9-12V-RND-DGR-WW	Dark Grey, Round Exterior Wall Light, 3000K Warm White
19867	ZEKE-9-12V-RND-DGR-W	Dark Grey, Round Exterior Wall Light, 5000K White
19868	ZEKE-9-12V-RND-WHT-WW	White, Round Exterior Wall Light, 3000K Warm White
19869	ZEKE-9-12V-RND-WHT-W	White, Round Exterior Wall Light, 5000K White

Thank you for purchasing your new LED ZEKE-9-12V-RND, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.


Specifications

Voltage:	12V DC	Lumen (±5%):	Warm White - 800lm White - 900lm	Dimmable:	No		
Power:	9W	Beam Angle:	120°	Lifespan:	50,000hrs		
IP Rating:	65	CCT:	3000K - 5000K	CRI:	≥85		
Requires:	12V DC Constant Voltage LED Driver						

Steps:

Please make a visual inspection to the fixture prior to installation. If any defect is to be found please return to you place of purchase for a replacement.

Make sure all power is correctly turned off from the mains and NOT just from the switch.

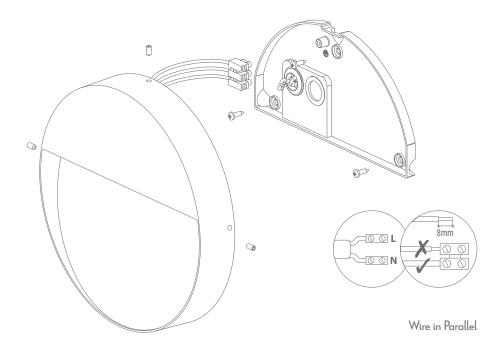

Note: -The lamp must be installed by professional electrician

-Ensure the power supply is switched off before fitting this product

- -Do not touch the lamp when in use
 - -Keep away from hot steam and corrosive gas