MPWIFI Installation Guide

WARNING

Installation MUST carry out by a qualified and licensed electrician.

IMPORTANT REMINDER

- 1. The supply to the remote-control receiver must be connected through a mains switch, i.e. existing wall switch, to isolate the power.
- 2. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
- 3. Install receiver into the ceiling fan canopy of the fan to ensure proper protection (Do not install in ceiling cavity as this will void warranty).
- 4. This unit is to be used for the control of a ceiling fan with a AC230/240V 50Hz power supply only.
- 5. Do not install in damp locations or immerse into water (For indoor use only).
- 6. Do not pull on or cut leads shorter.
- 7. Do not drop or bump the unit.
- 8. Please ensure plugs are in the correct position i.e. AC power input to the AC power and to the fan output of the fan. If in the incorrect position, receiver will be damaged, and will not be covered under warranty.
- 9. **PLEASE NOTE:** The battery will weaken with age and should be replaced regularly before leaking takes place as this will damage the transmitter. Dispose of used battery properly, keep the battery out of reach of children. Leaking batteries are not covered under warranty.
- 10. **CAUTION:** To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.


INSTALLATION INSTRUCTIONS

Incorrect wire connection will damage the receiver.

Ensure main power (240V) is turned off when installing the receiver as a voltage surge may blow the circuit board.

Insert the receiver into the drop rod hanging bracket and use the canopy to cover the receiver and bracket

NB: Ensure the wires are tucked away to avoid canopy rupturing the wires and causing a short circuit.

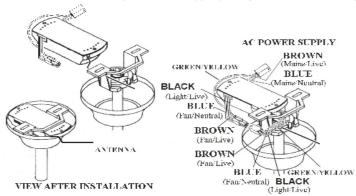


WARNING Installation MUST carry out by a qualified and licensed electrician.

PROGRAMMING

The Hand Held Remote Control System is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.





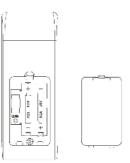

NB: The transmitter can be programmed to one or more receivers, so during the programming process, please refrain from attempting to program multiple receivers at the same time. Please ensure power is switched off for all/any additional receivers that are installed in the same premises when wanting to individually pair a desired transmitter to a particular receiver. Failure to ensure power is off for all other receivers may result in the transmitter being paired to all receivers instead.

FUNCTIONS OF TRANSMITTER

HIGH - Turn on the fan at high speed

MED - Turn on the fan at medium speed

 
LOW - Turn on the fan at low speed

OFF - Turn off the ceiling fan.

LIGHT ON/OFF Press and release immediately to turn on or off the light (if the light is step dim enabled the light will drop one level). 1H TIMER- Ceiling fan will turn off after 1 hour automatically.

2H TIMER- Ceiling fan will turn off after 2 hours automatically. **4H TIMER-** Ceiling fan will turn off after 4 hours automatically. **8H TIMER-** Ceiling fan will turn off after 8 hours automatically. **LIGHT-** Press light button "on" and "off" repeatedly to operate the light function of your ceiling fan lighting (if applicable).

TRANSMITTER









MPWIFI Pairing Instruction

MPWIFI Pairing Instruction

Please follow the instructions below to pair with a smart phone:



Manual.







Step 7









Please follow the instructions below to pair with a smart phone:



Choose the desired Wi-Fi network (must be 2.4Ghz), then enter the password to add the fan into the Wi-Fi network.





When the fan is successfully added, a little green tick will show up. You can then re-name the device. Click "done" to finish.



The fan is now added into your smart home network and can be controlled via a smart phone.

When the Wi-Fi network is disconnected the fan can still be controlled by the same smart phone via bluetooth.

Note:

You can share the access of the fan to another "Smart Life" app user via "Share" function within the app..

To remove the device from the current phone, click "remove device". Alternatively, turn off/on the fan 5 times to remove the device.

If you have more questions or would like to report a fault, please go to "contact and FAQ" section within the "Smart Life" app and speak to one of our customer service.



