




## WIRING DIAGRAM FOR SPYRFRDIM REMOTE+LED LIGHT & FAN

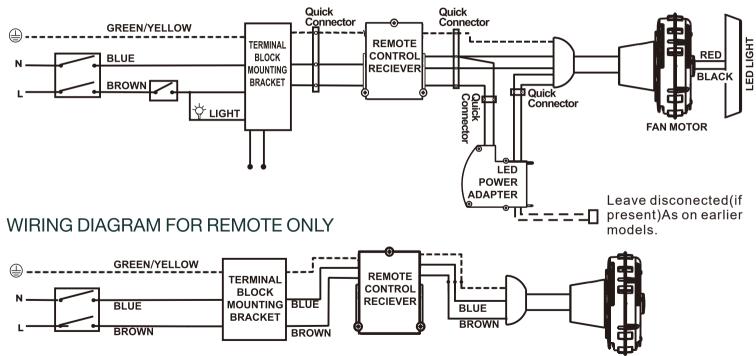

WARNING: For your safety, ensure the mains supply is switched OFF to the wiring circuit before performing any electrical wiring tasks. MAKE THE WIRING CONNECTION AS SHOWN IN THE APPROPRIATE IMAGE.

## CAUTION:

- Always have your fan installed by a licensed electrician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experiance and knowledge, unless they have been given supervision of instruction concerning use of the appliance by a person responsible for their safely.
- Children should be supervised to ensure that they do not play with the appliance.
- Make sure to disconnect the power supply before cleaning and maintenance.

## USING YOUR REMOTE HANDPIECE

**Step 1:** Turn "ON" isolation switch. **NOTE:** For models "with light", light will default to "ON" at 100% output.

Step 2: Use Eco/Med/High buttons to alter the fan speed.

## WITH LIGHT MODELS

Step 3: Press Light "ON/OFF" for light.

Step 4: Press the "STEP DIM" button to transition through 75%, 50%, 25% then back to 100% of light output.

(The units come factory paired, but if you wish to pair a remote handpiece to multiple fans, see below)

Step 1: Turn "OFF" isolation switch.

**Step 2:** Turn "ON" isolation switch and within 10 seconds, press LIGHT "ON" button for 3-4 seconds until a "Tick-Tack" sound is heard. (Repeat steps above if not successful).



**VENTAIR PTY. LTD.** 4 Capital Place, Carrum Downs VIC 3201



MADE IN CHINA

